

### **Damage on Car RPCX 103 Description**

- "A" & "B" end trucks inspect for defects caused by the derailment per FRA "Major" derailment procedures.
- Remove all four – 5 ½ X 10 disc brake wheel sets for shipment to an approved AAR facility to perform AAR wheel and axle inspections per AAR Major Derailment rule 36 A. 1-a
- "A" & "B" end truck teardown and dye check for cracks
- "A" & "B" end truck repairs
- "A" & "B" end coupler repairs based on inspection
- Repair cracked/damaged jacking post on all four corners
- Replace in kind or repair damaged "A" and "B" end's fluting above jacking pad area

### **Damage on Car RPCX 104 Description**

- "A" and "B" end truck inspect for defects caused by the derailment per FRA "minor" derailment procedures.
- "A" and "B" end truck teardown and dye check for cracks
- "A" and "B" end truck repairs
  
- "A" and "B" end coupler repairs based on inspection
- Repair cracked/damaged jacking post on all four corners
- Replace Axle #1, #2, #3, and #4 condemned during inspection for non-repairable gouges and major derailment classification of bearings.
- Fuel tank, brackets, and fuel line repairs,
- Air reservoir mounts and piping repairs
- HVAC unit mounts and piping repairs
- Repair and replace smashed window, frame, and support
- Repair or replace fluting in center of car
- Replace "BL" corner post
- Replace "BL" steps
- Replace "B" end cut levers
- Replace "B" end marker lights

### **Damage on Car RPCX 106 Description**

- "A" and "B" end truck inspect for defects caused by the derailment per FRA "minor" derailment procedures.
- "A" and "B" end truck teardown and dye check for cracks
  
- "A" and "B" end truck repairs
- "A" and "B" end coupler repairs based on inspection,
- Repair cracked/damaged jacking post on all four corners
- Replace axle #1, #2, #3, and #4 condemned during inspection for non-repairable gouges and major derailment classification of bearings.
- Replace "B" End coupler carrier
- Remove and/or replace "B" end draft gear
- Replace "A" and "B" end buffers
- Repair or replace "B" end fluting

- Replace “BR” corner post
- Replace “B” end cut levers
- Replace “B” end marker lights